

# Installation Guide for PS16 & PMW16



1. Lay Hood On Back.



2. Pinch both sides to remove wire connector Qty. 1 600cfm - Qty 2 1200cfm



3. Loosen nuts (do not remove) Qty. 4 600cfm - Qty. 6 1200cfm



4. Push motors forward and pull down.




5. Sheet metal collar plate exposed.



6. Remove nuts Qty. 7 600cfm - Qty. 12 1200cfm



7. Remove Collar Plate.

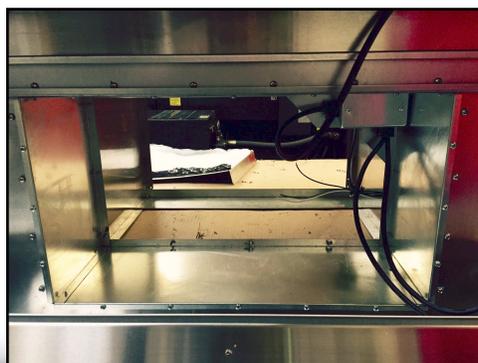

8. Hood now Hollow




9. Hood now Hollow (back view)



10. Mark stud location on canopy.



11. Drill holes in canopy. (top and lower portion)

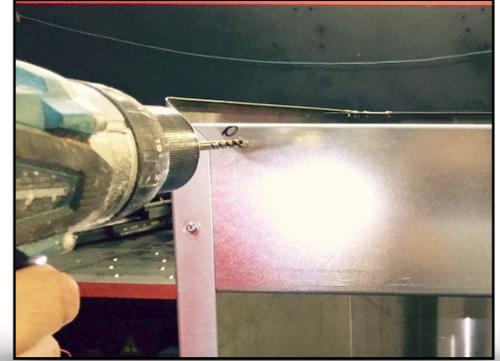


12. Drill holes in back of duct cover at the top.



13. Duct and electrical hanging out of ceiling.



14. #10 2" long hex screws & fender washers. (not provided)

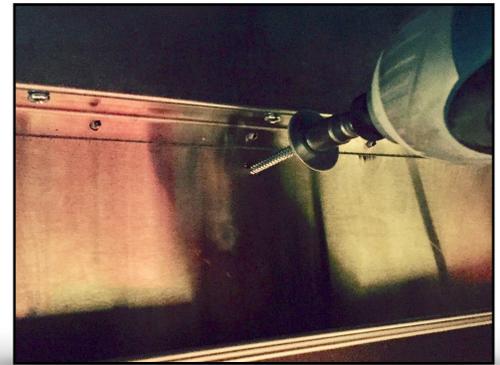

15. Lift hood in to place then install screws in canopy.



16. Screw duct cover into top plate or blocking using angle drill.



17. screw installed.




18. Piece of duct with damper (not provided)

18. Piece of duct without damper (not provided)




19. Slide duct up into place through bottom of canopy.

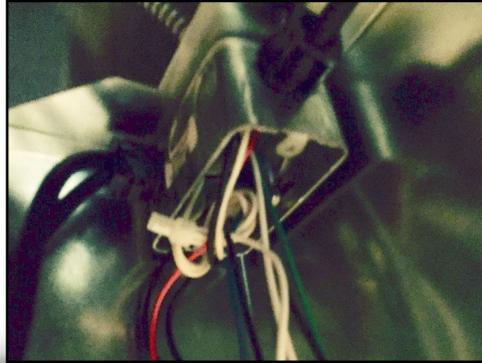

20. Fish wires in to junction box.



21. Reinstall collar plate.

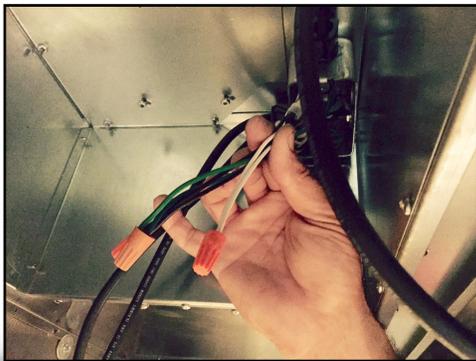

22. Black - Power in to hood  
White - Neutral  
Green - Ground  
Red - switch leg (remote blower)




23. Cover junction box.



24. Lift motor(s) in to place.



25. Tighten nuts Qty. 4 600cfm -  
Qty. 6 1200cfm

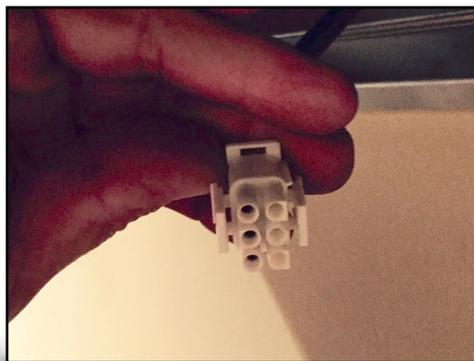

26. Wire Connector Qty. 1  
600cfm - Qty 2 1200cfm



27. Push connector on until it clicks, install filters then you are done.